

Pro-Lite+

Quick Start Guide

Release the Fire/On/Enter button and the speed will be locked with speed and range viewable in the LCD Display.

The unit powers off automatically and can be powered up by pressing and holding the Fire/On/Enter button for several seconds.



A New Look In Speed Enforcement



006-0856-00

QUICK REF, PRO-LITE



KUSTOM SIGNALS, INC.

9652 Loiret Blvd., Lenexa, KS 66219
(913) 492-1400 • 1 (800) 458-7866
www.kustomsignals.com

006-0856-00 Rev2




KUSTOM SIGNALS, INC.

www.kustomsignals.com

Pro-Lite+

SIMPLE FIRST TIME OPERATION

Install 2-AA batteries in the Battery Compartment.

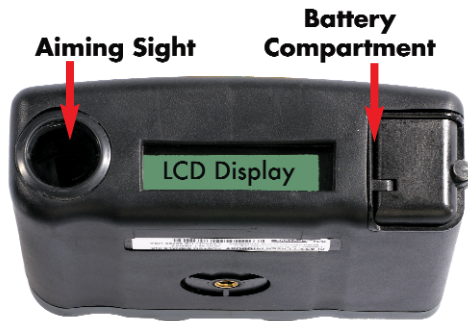

The unit comes up in Speed Mode.


Hold the unit to one eye and look through the Aiming Sight. You should see the Aiming Reticle.



Press and hold the Fire/On/Enter button:



The Aiming Sight will look like this:

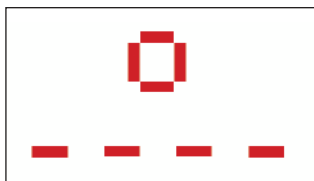

Place the Aiming Reticle on a reflective surface of the moving vehicle viewed through the Aiming Sight. Audio tones can be heard from the unit:

- Staccato tone means unreliable speeds.
- Solid tone means reliable speed and will be accompanied by a speed being displayed below the Aiming Reticle (60 mph in this case). Minus (-) sign means the vehicle is moving away.
- The target speed will update while pressing and holding the Fire/Enter/On button.

