

5 ProLaser 4 Menu

The menu button accesses the following settings or modes:

Distance	Sets min/max range limits to target vehicle for school and work zone enforcement. Fire lidar at desired target and press enter to set min/max ranges. Any target measured outside the range limits will not be displayed.
Set Direction	Sets target direction discrimination to Approaching only, Receding only, or Both.
DIF-TEST	Two-target, differential distance accuracy test mode.
Continuous/Single	Sets enforcement mode to continuous target tracking history or single shot mode.
mph-km/h	Set units to miles per hour or kilometers/hour.
HUD Options	Select HUD Speed and/or Range in enforcement mode.
Events	Displays date, time, speed and/or range measurements of 100 most recent targets locked.
Set Time/Date	Set date and time in 24 hour format.
Stopwatch	Average speed over distance enforcement mode.

6 Accuracy Tests

Self Test	Press check button to run internal accuracy tests.
HUD Alignment Test	Select isolated target ~100 feet away and sweep HUD horizontally and vertically across target.
Differential Distance Test	Select two targets ~ 50 and 100 feet away. Target each when prompted and verify range accuracy.



006-0966-10


KUSTOM SIGNALS, INC.
A PUBLIC SAFETY EQUIPMENT COMPANY

9652 Loiret Boulevard, Lenexa, KS 66219-2406
(800)4KUSTOM (800) 458-7866
www.kustomsignals.com

KSI Part # 006-0966-10 Rev. 1A

 
ProLaser 4 Quick Start Guide

1 Get To Know ProLaser 4



Accessories & Options

AA Batteries (4)



DC Adapter and Interface Cable




Shoulder Stock




KUSTOM SIGNALS, INC.
A PUBLIC SAFETY EQUIPMENT COMPANY

www.kustomsignals.com
(800) 4KUSTOM (800) 458-7866

2 ProLaser 4 Rear Panel Display

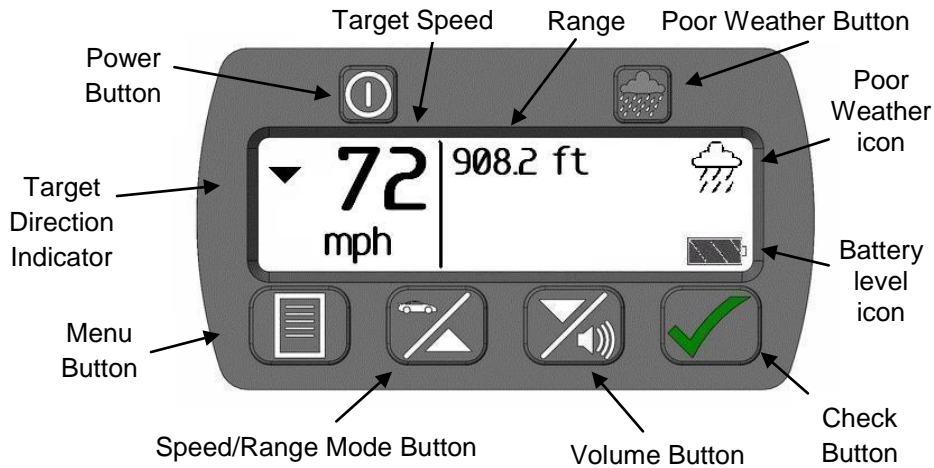

3 ProLaser 4 Multi-function Buttons

Icon	Single Press	Push and Hold
	Rear Display Brightness	Power On/Off
	HUD Brightness (Poor Weather in Menu)	Poor Weather Mode
	Menu	
	Speed or Range	Up (In Menu)
	Volume	Down (In Menu)
	Display Lock (Enter button in Menu)	Self Test

4 First Time Operation

1. Install 4-AA batteries in the Battery Compartment.
2. Press and hold the power button to power on/off.
3. Hold the unit by the pistol grip and aim through the HUD.
4. Press and hold the trigger to fire the laser.
5. Place the aiming reticle on the target vehicle. Continue tracking history through the HUD.
6. While holding trigger down, Speed and Range continually update.
7. Audio tones provide targeting feedback. A solid tone indicates target successfully acquired.
8. Release the trigger to lock the measurement in the HUD and rear panel display.
9. Press the check button to toggle the display lock feature on/off.
10. Press and hold the check button to perform internal self tests.

HUD Display

