


4 Eagle 3 Fork Test

The Advanced Fork Test guides the operator through a simple yet thorough tuning fork test. The operator may use the eFork in the remote control or traditional tuning forks. The Front antenna sequence tests Moving Opposite while the Rear antenna sequence tests for Moving Same Direction.

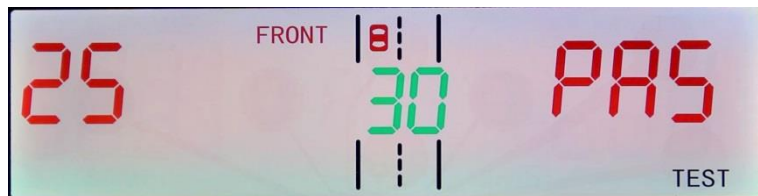

When prompted, "Flo" is for the low fork speed and "FHi" is for the high fork speed. The calculated results will be displayed with a clear pass or fail message. Front & Rear antenna remote buttons will send high and low fork signals manually.

Eagle 3 Quick Reference Guide
KSI Part # 006-1003-10 Rev 2



Eagle 3 Quick Reference Guide

1 Eagle 3 Front Panel Controls



S1 - Press to enter Menu screens and displays. In Menu, pressing increments Menu screens.



S2 - Initiates the display, internal and tuning fork tests. Press to bypass Automatic Fork Test. In Menu, pressing will save selection and return to Main Enforcement screen.



S3 - Programmable soft key short cut to favorite menu or GPS marker. Un-pair remote in remote menu. Patrol Speed Blanking with a locked target.



S4 - Control for power on / off. Power off to save current menu selections.




www.kustomsignals.com


Sales (800) 4KUSTOM (800) 458-7866

Customer Service (800) 835-0156

2 Eagle 3 Remote Control

A	Lock/Rel – Toggles target Lock/Release. With unit in HOLD, press and hold for QuikTrak. In Audio Menu, toggles squelch on/off. In Display Menu, toggles backlight control.	<p style="color: red; text-align: center;">NOTE: NO LED indicates the batteries need to be replaced.</p>  <p style="color: red; text-align: center;">NOTE: The first button press wakes the remote. It will take action on the next button press.</p>
B	Move/STA - Toggles between stationary and moving modes. Automatic Mode Switching overrides unless disabled.	
C	Tgt Dir – Stationary – Press to select Stationary All, approaching only, and receding only. Moving - toggles between Opposite and Same Direction.	
D	Fast - Toggles On/Off Fastest. In Menus, press to go back 1 menu or display.	
E	Access to battery compartment.	
F	LED – Red - trying to connect. Green - connection or eFork Test PASS. Blue – eFork signal transmitting.	
G	Front/Hold - Toggles on/off Front antenna. If rear antenna active, press to place Rear antenna in Hold and activate Front. In Menus, increases level. eFork – Sends high fork signal manually	
H	Rear/Hold - Toggles on/off Rear antenna. If front antenna active, press to place Front antenna in Hold and activate Rear. In Menus, decreases level. eFork – Sends low fork signal manually	
I	SCAN/Enter – Toggles Scan mode On/Off. In Menus, Enters selection and returns unit to Main Enforcement screen.	
J	Menu/BKLT - Quick press illuminates remote backlight. Press and Hold to enter Menus. In Menus, press to increment Menus & displays.	

3 Eagle 3 Touch Screen Control Pads

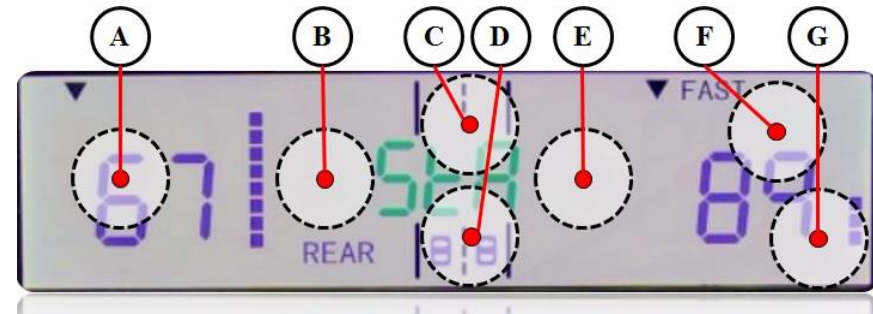

- A. Target Dir.** In Stationary operation, progresses All, approaching only, and receding only target zones. In Moving Operations, it toggles Opposite and Same Direction.
- B. Down Arrow** Toggles Scan Mode on/off; Down arrow in menus; lower brightness in Display Menu with manual backlight control.
- C. Front** Toggles Front antenna microwave transmitter on/off.
- D. Rear** Toggles Rear antenna microwave transmitter on/off.
- E. Up Arrow** Toggles Moving/Stationary Modes, Up arrow in menu screens; increases brightness in Display Menu with manual backlight control.
- F. Fast/Lock** Toggles Target Speed Lock. Toggles Fastest on/off when no targets displayed. Toggles manual/automatic brightness control in Display Menu.
- G. Test** Shortcut to Tuning Fork test.